


- 1. Most details included herein are drawn to full scale.**
- 2. Details shown herein, illustrate 2" foam panels. Other thickness and cores are available. Refer to other sections of this literature for additional options or consult Protean for any special requirements.**
- 3. In general, panel attachment should be made along the long edge of the panels.**
- 4. Details as shown herein illustrate a horizontal installation with subgirts and panel attachment located at the horizontal joints. For a vertical panel installation, modify details to install subgirts and panels vertically.**
- 5. Alternate subgirt layouts are available where subgirts can be oriented in the opposite direction of the long edge of the panels. Contact Protean for further information on these types of installations.**
- 6. The enclosed details represent typical standard details for the FM-210 system. In so much as the FM-210 is a custom designed system, this is only the beginning of the possibilities. Consult Protean for assistance in developing custom details for your application.**
- 7. Backer plate system available as alternate. Consult Protean Construction Products for details and information.**

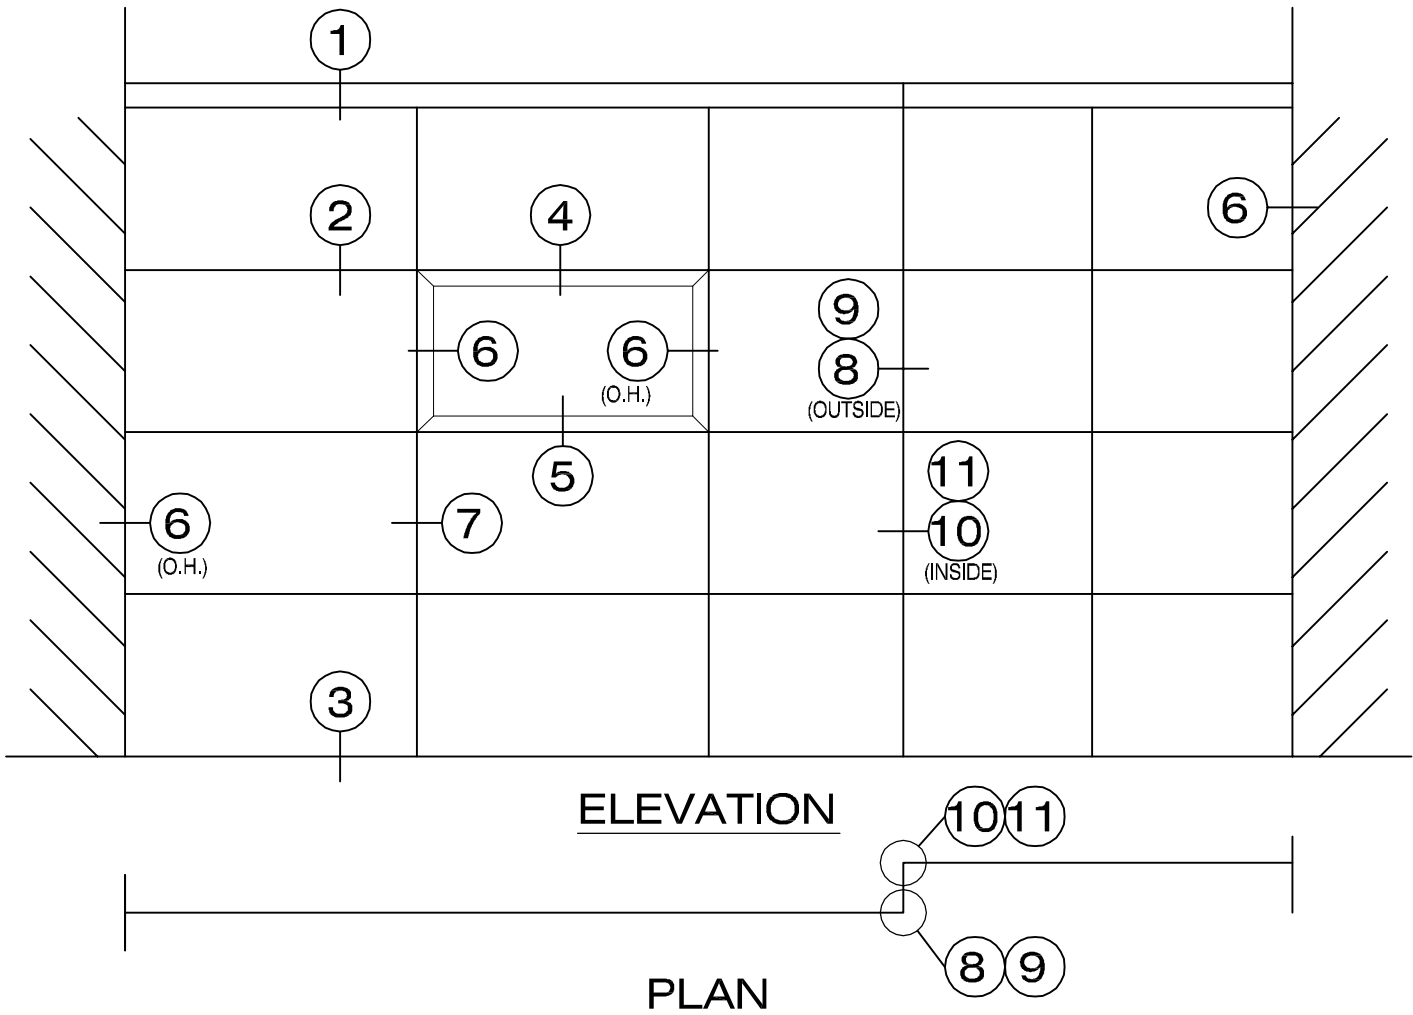

INDEX

SHEET #

DESCRIPTION

FM-210 / 1	PARAPET CAP
FM-210 / 2	HORIZONTAL JOINT
FM-210 / 3	BASE DETAIL
FM-210 / 4	WINDOW HEAD
FM-210 / 5	WINDOW SILL
FM-210 / 6	JAMB DETAIL

SHEET #

DESCRIPTION

FM-210 / 7	VERTICAL JOINT
FM-210 / 8	OUTSIDE CORNER (JT.)
FM-210 / 9	OUTSIDE CORNER (BENT)
FM-210 / 10	INSIDE CORNER
FM-210 / 11	MITERED INSIDE CORNER
FM-210 / 12	GLAZED WINDOW HEAD
FM-210 / 13	GLAZED WINDOW SILL

